




Before using your **SleepHalo™** we recommend reading this guide to prevent any damage that could occur due to misuse.




Package Contents

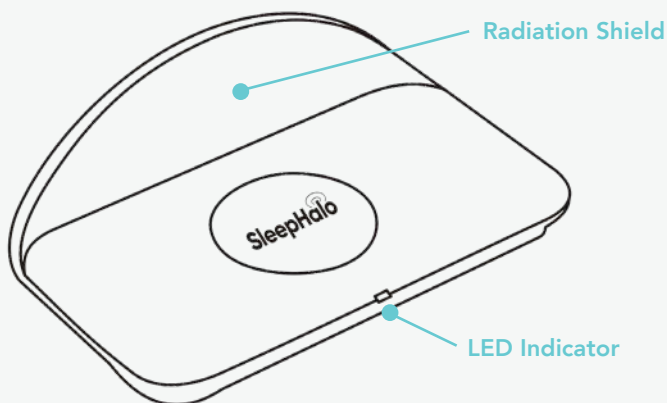

SleepHalo™ Charger Base

1M Cable

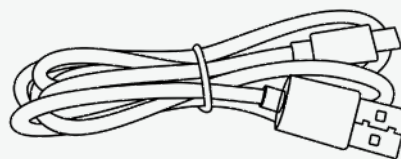

Power Adapter (UK)
(Adapter for your country supplied)



Compatibility for Wireless Charging


SleepHalo™ has been designed to be compatible with Qi enabled phones. A list can be found on our website.

If your phone is not wireless compatible it can still be used with your existing wired charger by placing the plugged-in phone onto **SleepHalo™**. You will then benefit from the radiation protection offered by **SleepHalo™**.





Connecting your SleepHalo™

Decide which side of the bed you wish to place your **SleepHalo™**, noting that the raised protection shield should be between you and the phone. On the underside of the product you can route the power cable in 2 directions. Choose which route is best, plug in the connector to the power port and clip the cable through the rebated area.

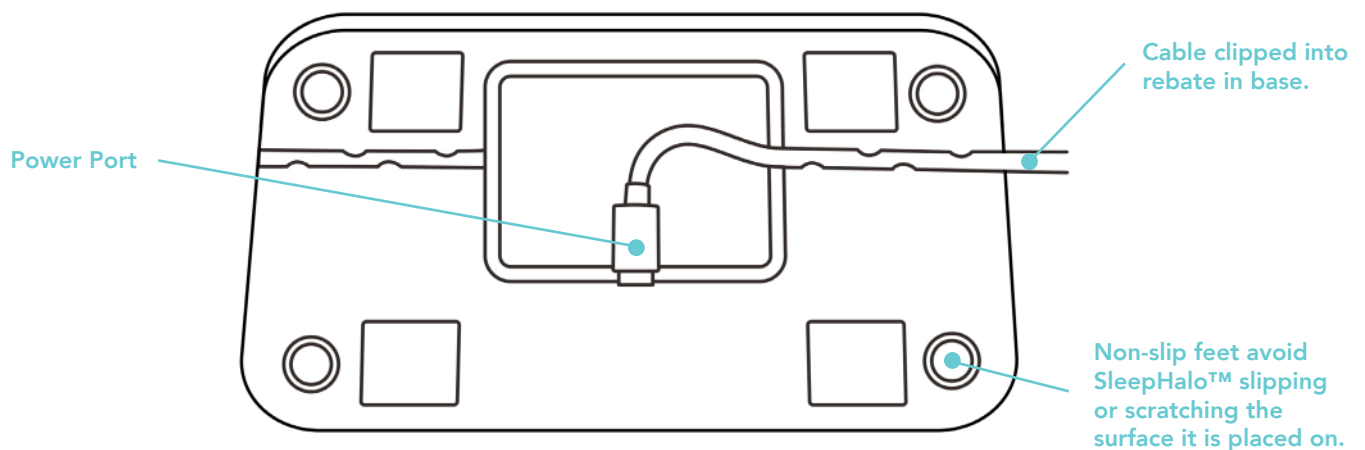


Connect **SleepHalo™** USB connector into the power adapter.

Plug **SleepHalo™** power adapter into a wall socket.

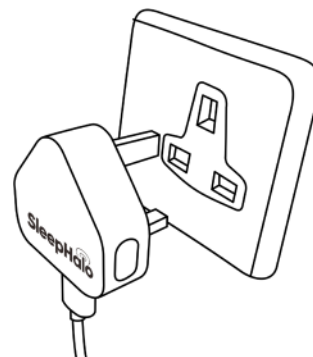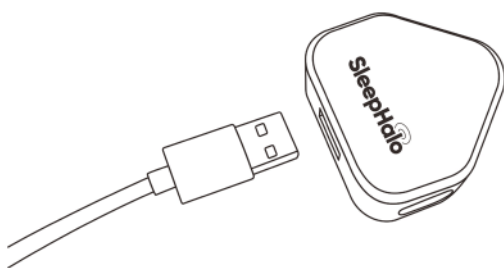

Using your SleepHalo™

To charge wirelessly, the phone must be placed onto **SleepHalo™** with the screen facing up. The indicator LED on the side will change from red to blue once phone is correctly placed. Place the phone on the centre of **SleepHalo™**.

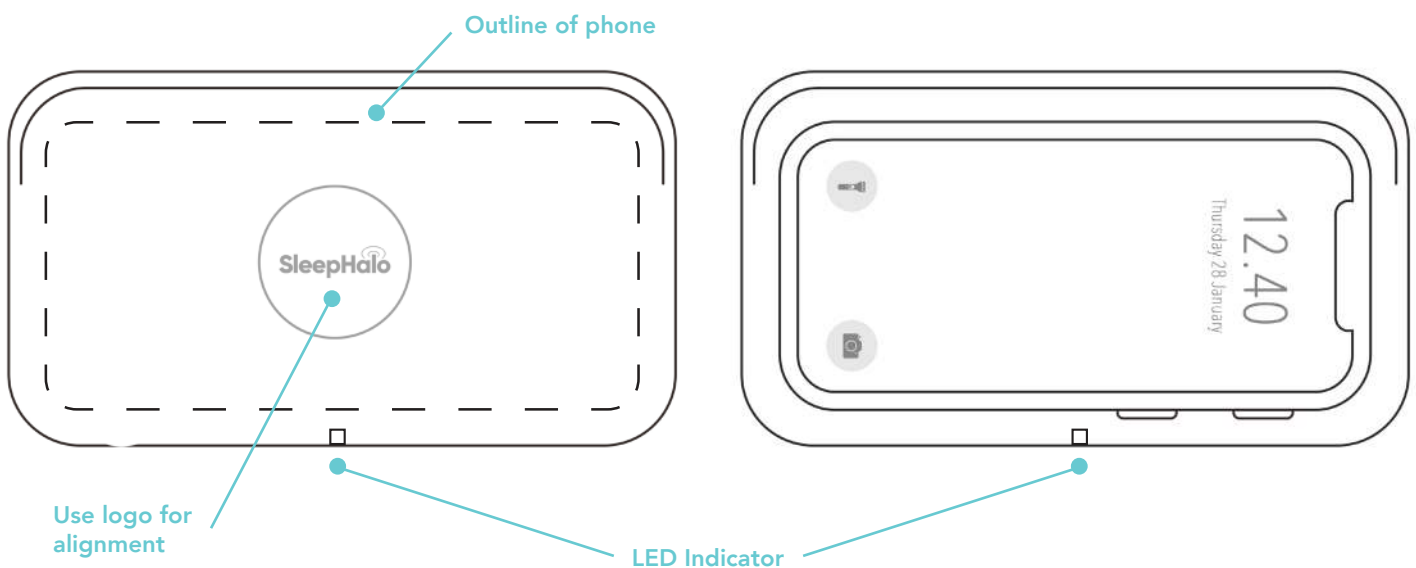

If the red LED flashes, this indicates the phone is not aligned correctly. Fully remove and then replace. Correct charging can also be confirmed by checking the screen of your phone for the charge icon.

LED Colour

SleepHalo™ Status

Red

Standby

Blue

Charging

Green


Fully Charged (dependent on phone)

Flashing


Phone not aligned correctly
Or foreign object detected

How to position SleepHalo™ on bedside table

When positioning SleepHalo™, position it so that when you are laying down you cannot see the screen of your phone.

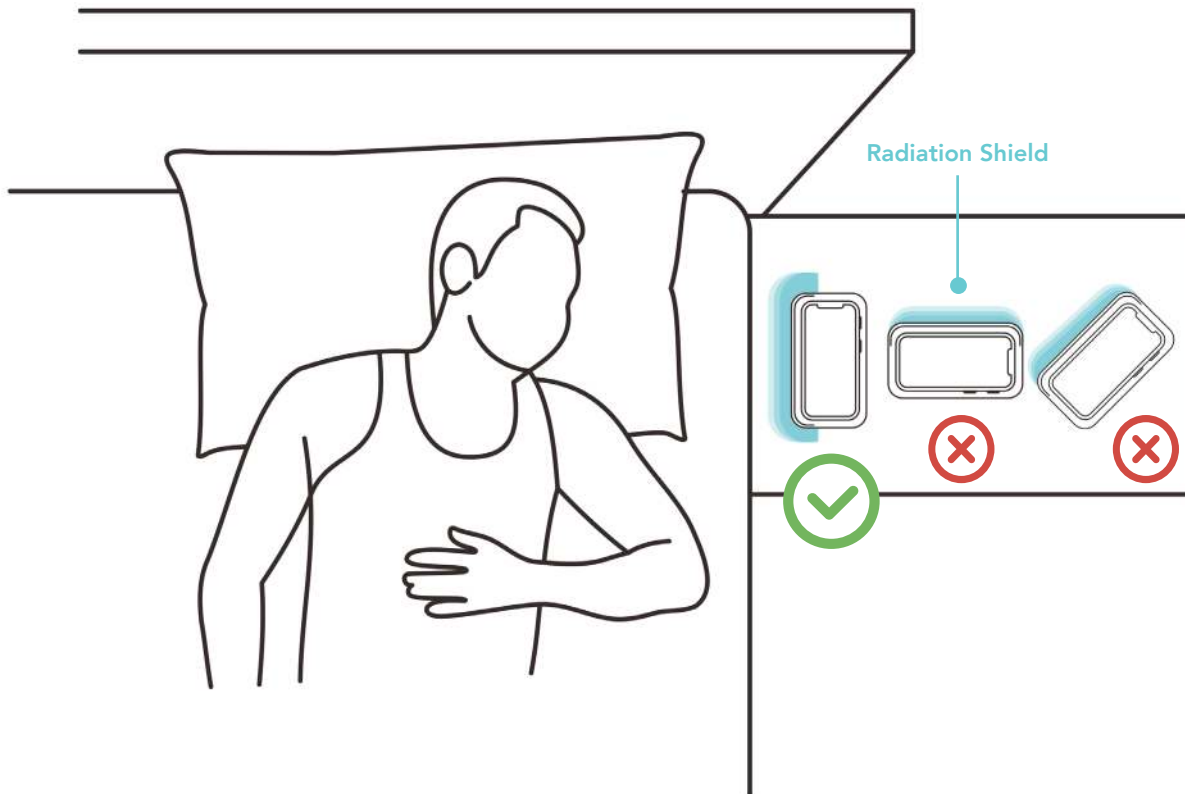

SleepHalo™ has rubber feet attached to the bottom to prevent it slipping. If you have a phone with a magnetic back, then sticky feet can be purchased from our website to hold SleepHalo™ down.

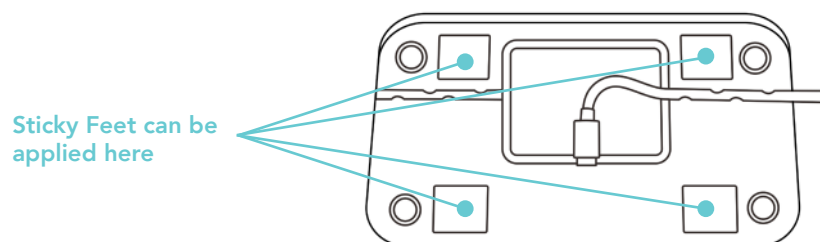

For further set-up information and Troubleshooting please visit our support page at [Lifeenergysolutions.com/product/sleephalo](https://lifeenergysolutions.com/product/sleephalo)



Safety Information

- Using a different power adapter other than the one supplied with **SleepHalo™** is at your own risk.
- Do not disassemble **SleepHalo™**, it is a sealed device.
- Whilst the phone is charging do not cover.
- Do not place anything other than your phone onto **SleepHalo™**.
- Do not use outdoors or in damp conditions.
- Unplug if **SleepHalo™** is not used for extended periods of time.
- If you can see damage to **SleepHalo™** do not use.
- To clean **SleepHalo™** unplug and use a soft damp cloth.
- Depending on your phone, you might hear faint noises while your phone charges.
- Do not place anything between your phone and **SleepHalo™**. Remove anything (credit cards) that are stored in the back of your phone case.

Specification

Power Adapter

- AC Adapter : 100-240V, 50/60 Hz 0.3A
- Output : 5V 1A

SleepHalo™

- Input: 5V 1A
- Output: 5W
- Wireless Range : 5mm